# for stationary arrangement in multimotor drives with hydrodynamic roller lift-off for extended service life





#### **Application as**

Overrunning Clutch

at high speeds, which are the same or similiar in freewheeling operation and in driving operation.

#### **Features**

Housing Freewheels FH with hydrodynamic roller lift-off are typically used in cases where an assembly can be driven from two or more motors or turbines at the same or similar high speed. They allow a continuous plant operation in the event that one of the energy sources or a drive line fails as well as energy saving in the case of partial load operation.

The Housing Freewheels FH are completely enclosed freewheels for stationary arrangement with input and output shaft.

#### **Advantages**

- Nominal torques up to 40675 Nm
- · Shaft diameter up to 129 mm
- Wear-free operation
- Low noise
- · Low power dissipation
- · Integrated oil filtration system
- Integrated locking brake
- Oil change without down time


#### Edmayr Antriebstechnik GmbH

Thalham 20, 4880 St. Georgen im Attergau Tel.: +43 7667 6840 Fax: +43 7667 20070 office@edmayr.at www.edmayr.at

#### **Hydrodynamic roller lift-off**

Housing Freewheels FH are equipped with hydrodynamic roller lift-off. The hydrodynamic roller lift-off is the ideal solution for overrunning


clutches at high speeds, not only in freewheeling operation, but also in the driving operation, as can occur, for example, in multimotor drives.

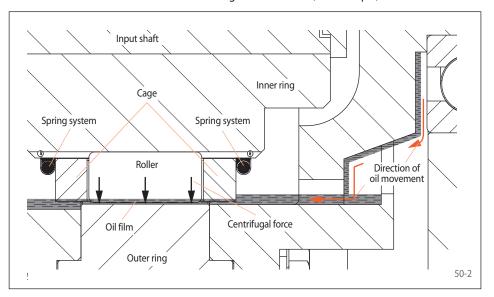

In the case of hydrodynamic roller lift-off, the lifting force is generated by an oil film applied during freewheeling operation by centrifugal force exerted on the outer ring race. This provides for practically wear-free freewheeling operation. The speed differential between the inner and outer rings is the decisive factor affecting the lift-off function. If the speed differential decreases, the lift-off force also decreases. Before achieving synchronous running, the clamping rollers guided in a cage are positioned with the aid of the central spring system against the outer ring race and are then ready to lock. This guarantees immediate torque transfer once the synchronous speed has been reached. The hydrodynamic roller lift-off enables a virtually wear-free freewheeling operation.

# for stationary arrangement in multimotor drives with hydrodynamic roller lift-off for extended service life



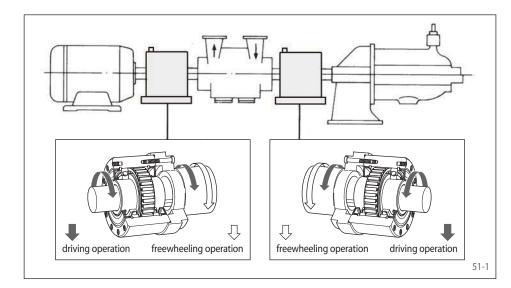


#### **Areas of application**

Housing Freewheels as automatic clutches in multimotor drives fulfil here an important function. They disengage a drive automatically as soon as it no longer provides power to the working machine. The Housing Freewheels do not require any external operating equipment.

Typical applications for multimotor drives are:

- Generators
- Pumps
- Ventilators
- Fans
- · Uninterrupted power supply

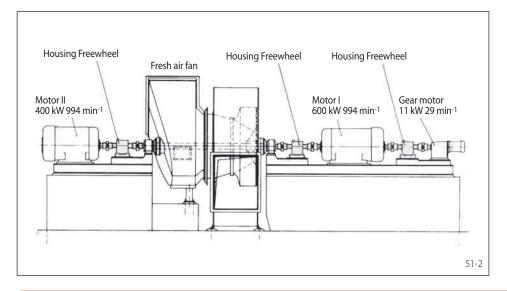

#### **Application example**

Three Housing Freewheels in the multimotor drive of a fresh air fan. The fan is driven by one or two electric motors. An additional auxiliary drive serves to slowly turn the fan for the purposes of inspection work or for an even cooling down after shut down. The Housing Freewheels automatically engage the respective working electric motor to the fan.

#### Selection torque for Housing Freewheels FH

In many cases where overrunning clutches are being used, dynamic processes occur that cause high peak torques. In the case of overrunning clutches, the torques that occur during start up must be observed. The peak torques when starting up can, in the case of asynchronous motors - especially when accelerating large masses and when using elastic couplings - significantly exceed the torque calculated from the motor pullover torque. The conditions for internal combustion engines are similar. Even in normal operation, on account of their degree of irregularity, peak torques can occur that are way in excess of the nominal torque.

The prior determination of the maximum occurring torque is carried out most safely by using a rotational vibration analysis of the entire system. This, however, requires a knowledge of the rotating masses, the rotational

rigidity and all of the excitation moments that occur on the system. In many cases, a vibrational calculation is too time consuming or you may not have all the necessary data in the configuration phase available. In this case, the selection torque MA of the overrunning clutch should be determined as follows:

 $M_A = K \cdot M_L$ 

In this equation:

 $M_A = Selection torque of the freewheel$ 

K = Operating factor

 $M_L$  = Load torque for constant rotating freewheel:

 $= 9550 \cdot P_0/n_{FR}$ 

 $P_0 = Nominal power of motor [kW]$ 

n<sub>FR</sub> = Speed of the freewheel in driving operation [min-1]

After calculating M<sub>A</sub> the freewheel size must be selected in accordance with the catalogue tables in such a way that in all cases this applies:

 $M_N \ge M_A$ 

M<sub>N</sub> = Nominal torque of the Housing Freewheel FH in accordance with the table values [Nm]


The operating factor K depends on the properties of the driver and the machine. The general rules of mechanical engineering apply here. We recommend using an operating factor K of at least 1,5. We will be pleased to check your selection.

#### Edmayr Antriebstechnik GmbH

Thalham 20, 4880 St. Georgen im Attergau Tel.: +43 7667 6840 Fax: +43 7667 20070 office@edmayr.at www.edmayr.at

for stationary arrangement in multimotor drives with hydrodynamic roller lift-off for extended service life



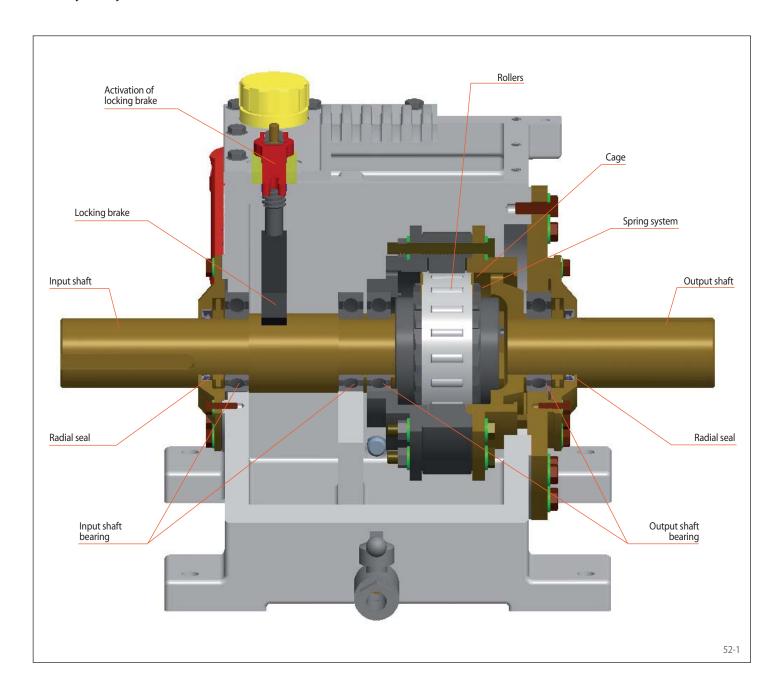



Thalham 20 Tel.: +43 7667 6840 A-4880 St. Georgen im Attergau Fax: +43 7667 20070 www.edmayr.at office@edmayr.at



# for stationary arrangement in multimotor drives with hydrodynamic roller lift-off for extended service life



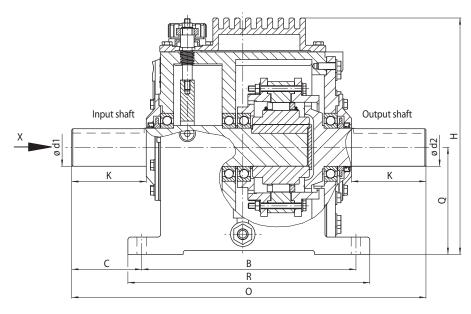

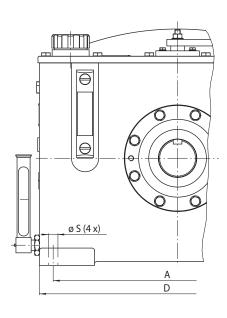

53-1 53-2

Overrunning Clutch		Type hydrodynamic roller lift-off				Dimensions											
	wheel	Туре	Nominal torque M <sub>N</sub>	Max.s Output shaft overruns	speed Input shaft drives	Shaft d1 and d2	A	В	С	D	Н	К	0	Q	R	S	Weight

					Max.speed		Shaft A	А	R	C	υ	Н	K	0	Q	K	١١	Weight
		Freewheel		Nominal	Output shaft	Input shaft	d1 and d2											
		Size	Type	torque	overruns	drives												
_				MN														
inch				lb-ft	min-1	min <sup>-1</sup>	inch	inch	inch	inch	inch	inch	inch	inch	inch	inch	inch	lbs
		FH 1000	R	1 000	5600	5600	1 3/4	12 <sup>3</sup> / <sub>4</sub>	12 <sup>3</sup> / <sub>4</sub>	3 <sup>7</sup> / <sub>16</sub>	16 <sup>1</sup> / <sub>4</sub>	12 <sup>7</sup> / <sub>8</sub>	3 7/8	19 <sup>5</sup> / <sub>8</sub>	5 <sup>3</sup> / <sub>4</sub>	14 <sup>1</sup> / <sub>2</sub>	11/16	231
		FH 2000	R	2000	4200	4200	2 <sup>5</sup> /16	16 <sup>3</sup> / <sub>4</sub>	$14^{3}/_{4}$	4 1/4	18 <sup>3</sup> / <sub>4</sub>	15	4 5/8	23 1/4	6 <sup>7</sup> /8	16 <sup>1</sup> / <sub>2</sub>	11/16	355
	5	FH 4000	R	4000	3 6 0 0	3600	2 3/4	18	$15^{1}/_{2}$	5 <sup>1</sup> / <sub>16</sub>	20	17 <sup>1</sup> / <sub>8</sub>	$5^{3}/_{8}$	25 <sup>5</sup> / <sub>8</sub>	7 3/4	$17^{1/2}$	11/16	496
	=	FH 8000	R	8000	3000	3 0 0 0	3 <sup>5</sup> / <sub>16</sub>	17 <sup>1</sup> / <sub>2</sub>	18 <sup>1</sup> / <sub>4</sub>	5 <sup>5</sup> / <sub>8</sub>	21 1/2	18 <sup>15</sup> / <sub>16</sub>	6 <sup>1</sup> / <sub>8</sub>	29 1/2	8 <sup>5</sup> / <sub>8</sub>	20 1/2	<sup>13</sup> / <sub>16</sub>	716
		FH 12000	R	12000	2500	2500	3 7/8	18 <sup>1</sup> / <sub>4</sub>	21 1/2	6 <sup>5</sup> /16	22 3/4	20 15/16	6 <sup>15</sup> / <sub>16</sub>	34 <sup>1</sup> / <sub>8</sub>	9 5/8	23 3/4	1 <sup>1</sup> / <sub>16</sub>	926
		FH 18000	R	18000	2300	2300	4 5/16	20 1/2	23 1/4	7 <sup>5</sup> / <sub>16</sub>	26	20 5/8	7 11/16	37 <sup>7</sup> / <sub>8</sub>	11 <sup>1</sup> / <sub>4</sub>	25 3/4	1 <sup>5</sup> / <sub>16</sub>	1402
		FH 30000	R	30000	2000	2000	5 <sup>1</sup> / <sub>16</sub>	25 <sup>1</sup> / <sub>2</sub>	26 <sup>1</sup> / <sub>4</sub>	7 7/8	31	26 <sup>1</sup> / <sub>2</sub>	8 <sup>5</sup> / <sub>8</sub>	42	123/4	29 1/2	1 <sup>5</sup> / <sub>16</sub>	2178
metric				Nm	min-1	min <sup>-1</sup>	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	mm	kg
		FH 1000	R	1356	5600	5600	44,45	323,85	323,85	87,31	412,75	327,00	98,43	498,48	146,05	368,30	17,50	105
		FH 2000	R	2712	4200	4200	58,74	425,45	374,65	107,95	480,00	381,00	117,48	590,55	174,63	419,10	17,50	161
	<u> </u>	FH 4000	R	5423	3600	3600	69,85	457,20	393,70	128,59	508,00	435,00	136,53	650,88	196,85	444,50	17,50	225
	Ĭ	FH 8000	R	10847	3000	3000	84,14	444,50	463,55	142,87	546,00	481,00	155,58	749,30	219,08	520,00	21,00	325
		FH 12000	R	16270	2500	2500	98,43	463,55	546,10	160,35	578,00	532,00	177,00	866,80	244,48	603,00	27,00	425
		FH 18000	R	24405	2300	2300	109,54	520,70	590,55	185,74	660,00	600,00	195,26	962,00	285,75	654,00	33,00	636
		FH 30000	R	40675	2000	2000	128,59	647,70	666,75	200,03	787,00	672,00	220,00	1066,80	323,85	749,00	33,00	988

The maximum transmissible torque is 2 times the specified nominal torque. See page 14 for determination of selection torque. Keyway according to USAS B17.1-1967

#### **Locking brake**

During freewheeling operation, the stationary input shaft of the Housing Freewheel is effected by a drag torque from the freewheeling output shaft. By manually activation of the in the housing freewheel integrated locking brake the driving parts are prevented from being carried along.

#### Mounting

The Housing Freewheel must be mounted in such a way that shaft d1 is the input shaft and shaft d2 the ouput shaft.

We recommend the use of torsionally stiff shaft couplings generating only low reactive forces. On indication of the reactive forces that occur we are well prepared to check the usable life of the bearings installed.

#### **Example for ordering**

Prior to ordering, please complete the questionnaire on page 115 by specifying the direction of rotation in driving operation when viewed in direction X so that we can check the selection.

#### EDMAYR ANTRIEBSTECHNIK GmbH

Thalham 20 Tel.: +43 7667 6840 A-4880 St. Georgen im Attergau Fax: +43 7667 20070

www.edmayr.at office@edmayr.at

